


Twelve Zone Expander



## **Feature**

PEX 8000 is Zone expander for PX 8000 series to expand a small PA system up to 56 Zone with NONE-interrupt BGM function.

- Remote power on AC or DC powered.
- Tabletop or System Rack-mount.

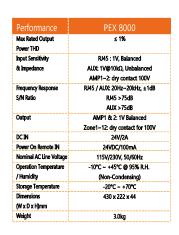



68



- Z1 ~ 12 zone select button.
- Z1 ~ 12 zone LED indicator.
- AUX select button.
- AUX LED indicator.
- AMP1 ~2 fault LED indicator.
- Power ON LED indicator.

## **Front Panel**

## **Rear Panel**

- Z1~12 zone 100V output dry contact, Phoenix connector.
  - AMP1~2 100V-IN dry contact, Phoenix connector.
  - AMP1~2 XLR Balanced Output.
  - AUX: RCA Unbalance Input.
  - AUX VR controls the aux level.
  - IN: RJ45 connect to Previous unit (PX8000/PEX8000)
  - OUT: RJ45 connect to Next unit (PEX8000) Dipswitch for setup ID address.

  - 24VDC In to powered the unit, Phoenix connector.
- Power Remote Phoenix connector to remote power on the unit with 24VDC IN.
- Power ON/OFF switch.
- AC Voltage switch. AC Inlet.



67